verilux®
LIFE IN A BETTER LIGHT®

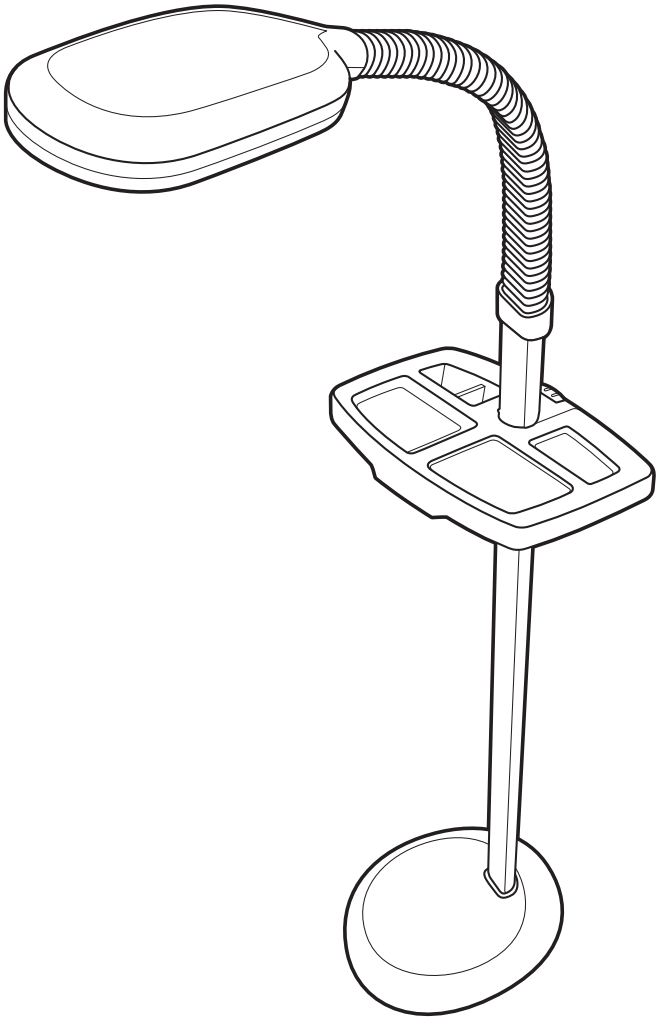

Original | Deluxe

VF01

Natural Spectrum® Floor Lamp

verilux®
The Healthy Lighting Company™

Dear Customer,

Thank you for purchasing the Verilux Original Deluxe Natural Spectrum® Floor Lamp. You have received a quality product, backed by a three-year limited warranty. As a Verilux customer, your satisfaction means everything to us. We look forward to serving you now and in the future.

Many other healthy lighting products are available through our catalog and online. Visit us on the web at www.Verilux.com to request a free catalog and learn more about all our quality Verilux products, or call our toll-free number 1-800-454-4408.

Have a Bright Day!

Nicholas Harmon
President, Verilux, Inc.

IMPORTANT SAFETY INSTRUCTIONS

SAVE THESE INSTRUCTIONS

Thank you for purchasing the Original Natural Spectrum® Deluxe Floor Lamp. Please read the following safety information before using. To reduce the risk of fire, electrical shock, or injury to persons:

- Do NOT dismantle.
- Do NOT alter power cord.
- Turn off/unplug and allow to cool before replacing bulb or cleaning.
- For indoor use only.
- The lamp is an electrical device. DO NOT USE NEAR WATER.

GENERAL PRECAUTIONS

- Before plugging in the lamp, check to make sure the voltage of the wall socket does not exceed 120 volts.
- Do not use the lamp outside or in wet locations such as bathrooms. It is intended for indoor, dry use only.
- Not for use with light dimmers, timers, motion detectors or extension cords.
- This product may cause interference with radios, cordless telephones, or devices that use a wireless remote control, such as televisions. If interference occurs, move the product away from the device, plug the product or device into a different outlet, or move the lamp out of the line of sight of the remote control receiver.
- Do NOT use lubricating agent in assembly; please see troubleshooting section if you are having difficulty assembling your lamp.
- Unplug from electrical outlet for extended periods of non-use or during lightning storms to ensure protection of the electronics.

GETTING STARTED

Main Parts & Controls

A. Lamp Head
B. Gooseneck
C. Shaft
D. Lamp Base
E. Power Cord
F. Polarized Plug
G. Parabolic Grid Diffuser
H. Bulb
I. High/Off/Low Switch

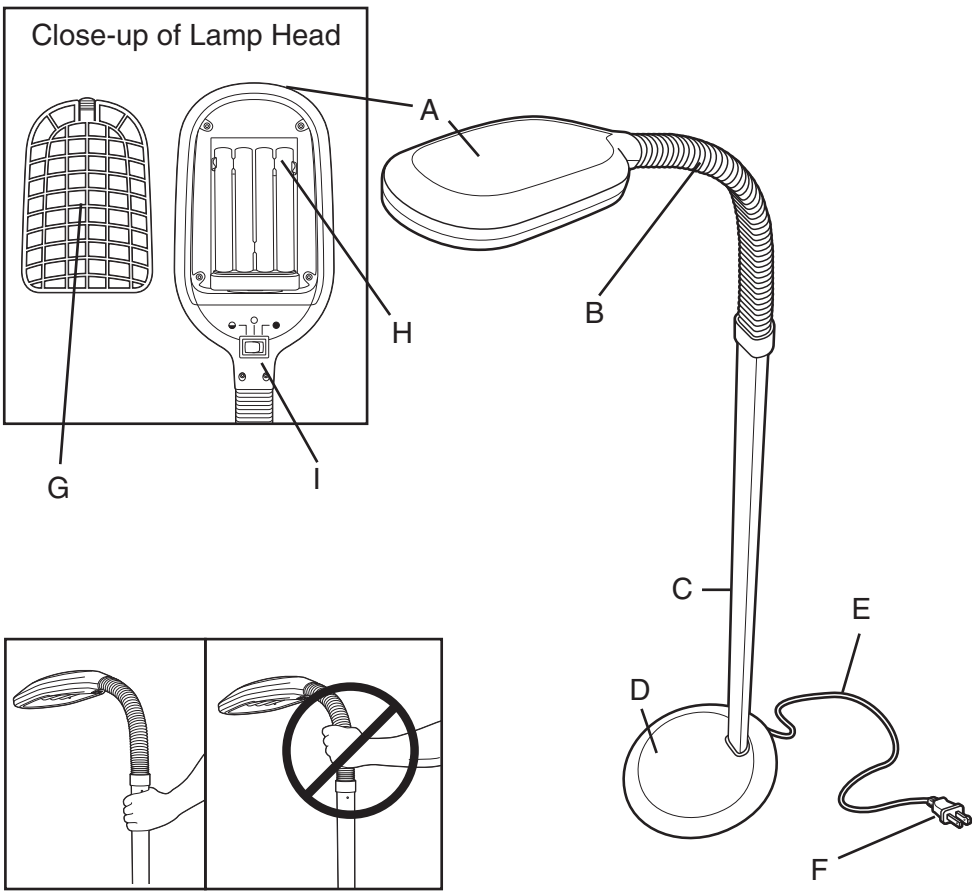

Attention!

DO *lift your lamp by the shaft.* ***DO NOT*** *lift the lamp by the gooseneck.*

UNPACKING YOUR LAMP

1. Remove all pieces from box.
   Locate 2 screws and tightening tool.
2. Detach red plastic pieces and store them in the event you need to return the lamp.
3. **Important:** To avoid scratching the metal shaft, do not use a sharp object to cut the plastic covering. The clear plastic covering on the shaft is specially designed to tear away easily.

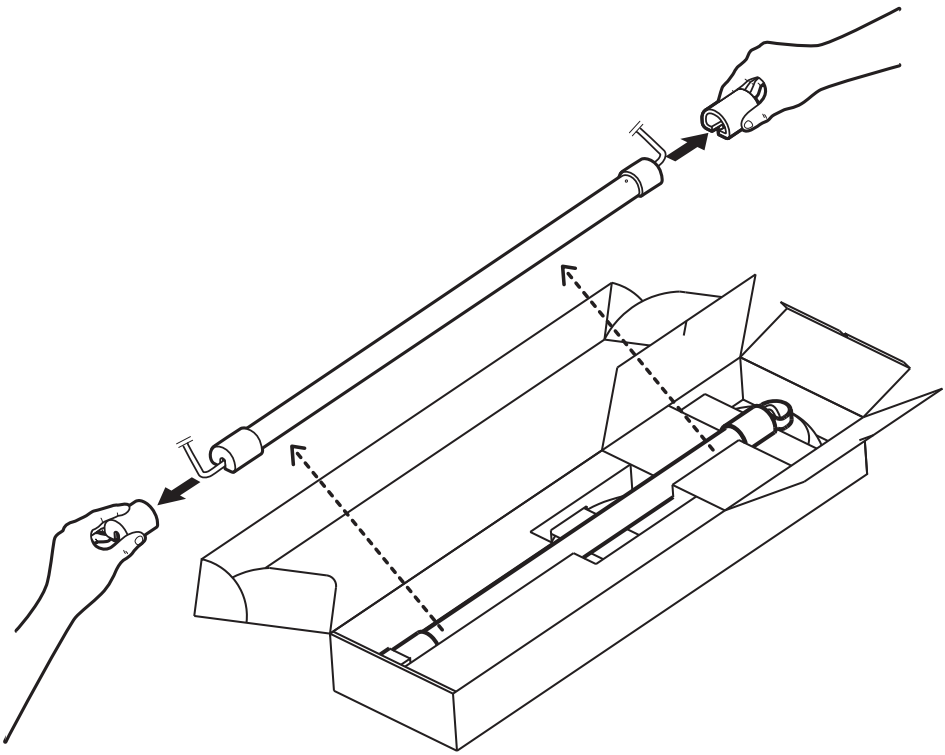

IMPORTANT NOTE:

Remove red plastic protective pieces prior to assembly.

ASSEMBLY INSTRUCTIONS

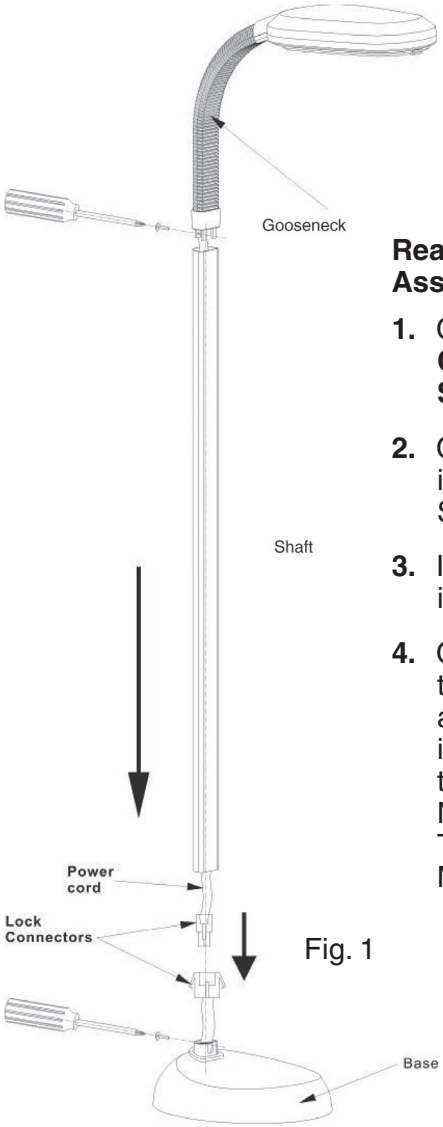

Fig. 1

Read Instructions Carefully Before Assembly:

1. Connect the two ends of the **Power Cord (between the base and the Shaft)** using the lock connectors.
2. Carefully tuck excess **Power Cord** into the **Shaft**. DO NOT CUT OR SHORTEN THE POWER CORD.
3. Insert the **Flex Pole** and the **Shaft** into the **Base**.
4. Check direction of the lamp and the hole on the **Base**, then use a Philips Head Screwdriver (not included) to tighten the screw into the hole. BE VERY CAREFUL NOT TO PINCH ANY PART OF THE CORD BETWEEN ANY METAL PIECES.

ASSEMBLY INSTRUCTIONS cont.

5. To prevent damage during shipping, the Verilux bulb is surrounded by protective padding. Carefully remove and dispose of the protective padding. Check to ensure that the bulb is fully seated and has not come loose from the socket during shipping. There should be no gap between the bulb and socket.

6. Attaching the Parabolic Grid Diffuser

- Remove grid diffuser from protective plastic bag
- Insert plastic pegs at bottom of grid diffuser into openings near bulb socket
- Snap tab into place

7. Plug lamp into outlet and turn on. If bulb does not illuminate instantly, please refer to the troubleshooting section of this manual.

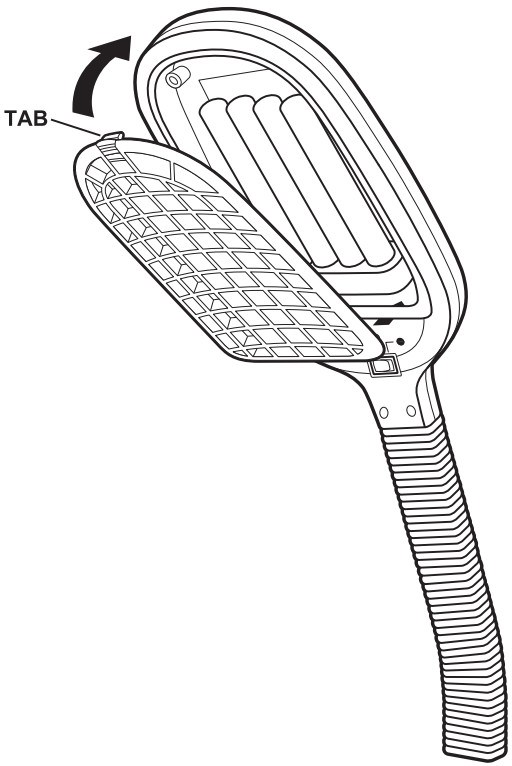

BULB REPLACEMENT INSTRUCTIONS

Removal

1. Unplug lamp from power source.

2. To access to the bulb, remove grid diffuser by depressing the tab and lifting it out. (See page 7)

3. Firmly hold bulb base (B) and pull bulb (C) from the socket (A) in an outward motion.

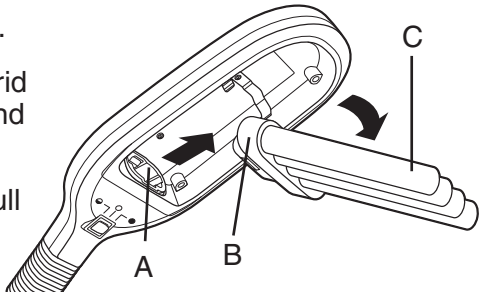

Installation

1. Unplug lamp from power source.

2. Firmly hold base (B) and push bulb (C) into the socket (A).

3. Be sure bulb is firmly seated in the socket (see below) and snapped into the metal bulb clip (D).

4. Replace grid diffuser.

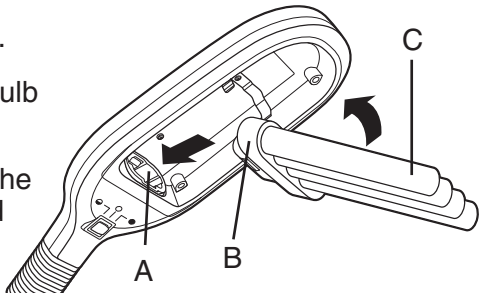

YES

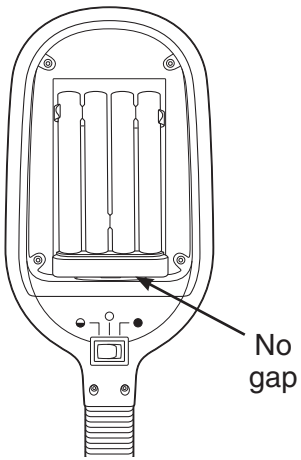

Correctly seated bulb

~~NO~~

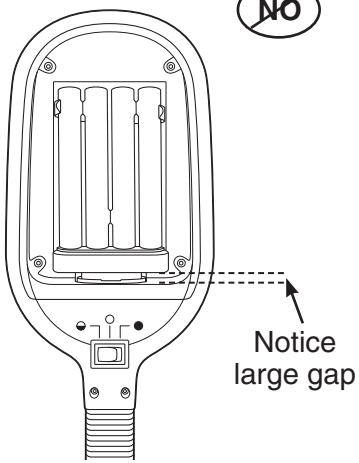

Incorrectly seated bulb

TROUBLESHOOTING

Before requesting service on your Verilux® lamp, please read the following:

- Make sure all power connectors, cords, and plugs are inserted fully and securely.
- Be sure the bulb is securely seated into the socket. (See page 8)
- Make sure there is power to the wall outlet or try another outlet.
- Problem with aligning screw holes? Always start with the base and work your way up with the shaft and attach the head last. Place your foot on the base of the lamp on the floor. While holding the shaft with your hand, gently rock the unit back and forth. Shaft should ease into socket and screw holes will align.

PROBLEM	CHECK	SOLUTION
Light won't come on	Has the plug come loose?	Insert plug securely into wall outlet.
	Is the bulb old?	Check the bulb for blackening/darkening at the ends (an indicator of bulb life) and replace bulb.
	Is the bulb connected securely to the socket?	Be sure the bulb is securely seated into the socket, repeat the bulb installation process.
Blackening/darkening at ends of bulb	Is the bulb new?	Sometimes when a new bulb is turned on for the first time the tube will darken, but this will fade after a few minutes.
	Is the bulb old?	With older bulbs darkening of the tube indicates end of bulb life. (This doesn't affect operation except to reduce the amount of light available since the phosphor in that area has become inactive). Bulb replacement is recommended.
Light flickers	Has the plug come loose?	Insert plug securely into wall outlet.
	Is the bulb connected securely to the socket?	Be sure the bulb is securely seated into the socket, repeat the bulb installation process.
	Is the lamp connected to a dimmer switch?	Connect lamp plug only to wall outlet without a dimmer switch.

CARE & CLEANING

Your lamp is made from high quality materials that will last for many years with minimum care. You may want to periodically clean the lamp, using a mild non-abrasive cleaner and soft cloth. When cleaning, make sure you have turned off and unplugged the unit, and allowed sufficient time for the unit to cool. All liquid should be properly wiped away and dried prior to restoring power.

DO NOT USE SOLVENTS OR CLEANERS CONTAINING ABRASIVES, OR AMMONIA BASED CLEANERS

Note: *All moisture should be properly wiped away and dried prior to restoring power.*

WARRANTY

Three-Year Limited Warranty

ATTENTION! ONCE OPENED, PLEASE ***DO NOT*** RETURN THIS PRODUCT TO THE STORE WHERE IT WAS PURCHASED FOR REPAIR OR REPLACEMENT!

Many questions may be answered by visiting www.Verilux.com, or you may call our customer service department at 1-888-544-4865.

This limited warranty is provided by:
Verilux, Inc., 340 Mad River Park, Waitsfield, VT 05673

Verilux® warrants this product to be free from defects in material and workmanship for a period of three years from the date of the original retail purchase. During the limited warranty period, Verilux, Inc. will, at its option, repair or replace defective parts of this product, at no charge to the customer, subject to the following limitations. This limited warranty does not include any postage, freight, insurance or delivery fees. This warranty does not cover damage, defect or failure caused by or resulting from accident, external destruction, alteration, modification, abuse, misuse or misapplication of this product.

If, during the first three years of ownership, this product fails to operate properly, it should be returned as specified below:

Please pack the defective product in its original protective packing and box, with a copy of your sales receipt, along with $6.95 (check or money order to cover shipping and handling), and send to:

For U.S. Postal Service Only:	**For Fed Ex & UPS Only:**
Verilux Warranty **Service Center, c/o WTB** P.O. Box 119, West Redding, CT 06896	**Verilux Warranty** **Service Center, c/o WTB** 32 Henry Street, Bldg 17A, Bethel, CT 06801

Please allow 4-6 weeks before you receive the repaired or replaced product.

ATTENTION: When returning a product, be aware that damage during shipping is the responsibility of the purchaser and will void any warranty claim. We recommend that you insure the shipment by shipper when returning this product or any parts. Be sure to return product in original packaging.

Note: *Verilux® recommends using a quality surge suppressor on all electronics equipment. Voltage variations and spikes can damage electronic components in any system. A quality suppressor can eliminate the vast majority of failures attributed to surges and may be purchased at electronics stores.*

Due to ongoing improvements, actual product may have slight variations from the product described in this manual.

Please visit our web site at: www.Verilux.com

340 Mad River Park, Waitsfield, VT 05673

1-800-786-6850

VF01-MAN-Rev4

Printed in China for Verilux, Inc.
© Copyright 2009 Verilux, Inc. All rights reserved.